


LS 1200 Four-Lights Bracket

Installation Manual

Aputure®


Product Details

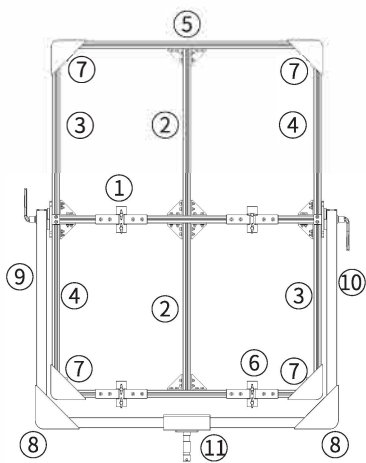

What's Inside


When you unbox the product, please make sure all the items listed below are included. Otherwise, please contact the seller immediately.

- Tips:
- Before installation, it is recommended that the components be sorted neatly in the following order to improve installation efficiency.
 - The illustrations in the manual are only diagrams for reference. Due to the continuous development of new versions of the product, if there are any differences between the product and the user manual diagrams, please refer to the product itself.

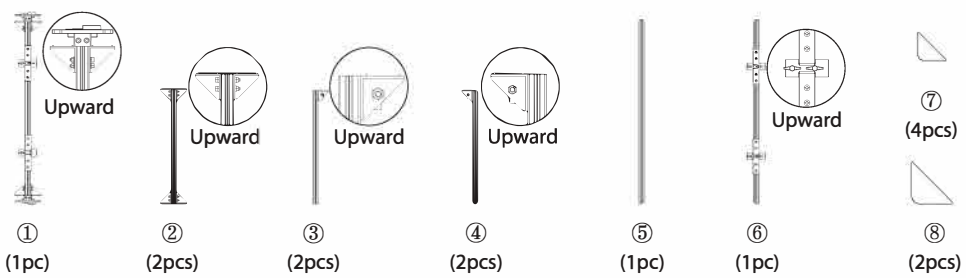

Detailed product manual can be found on www.aputure.com.


-1-

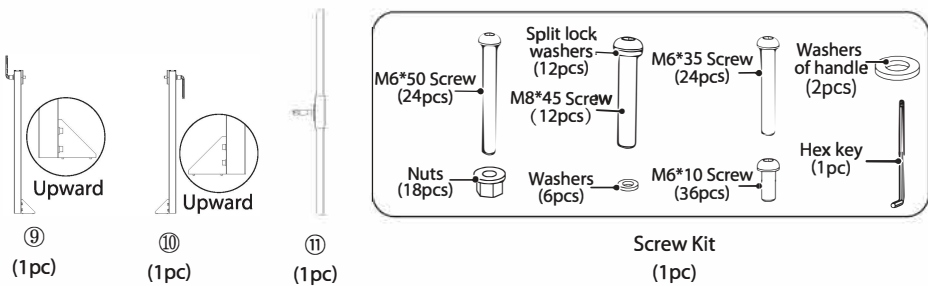

Tips for Using Hex Key


- Use this end to tighten screws
- Use this end to quickly fasten screws

Getting Started

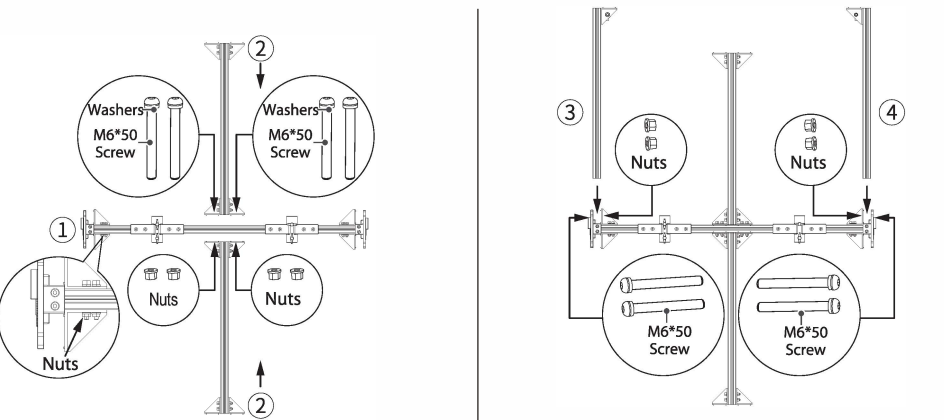


- Install the middle upper and lower of bracket: Place ① and ② as shown, fix them with 4 sets of M6 * 50 screws & washers and nuts.
- Install the upper side of bracket: Place ③ and ④ as shown, fix them with 4 sets of M6 * 50 screws and nuts.


-2-

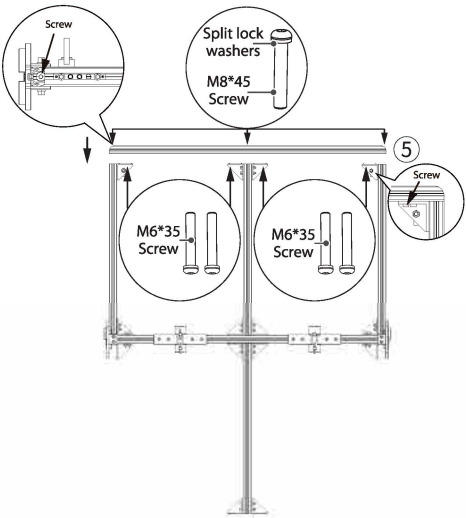


- Install the upper of bracket: Place ⑤ as shown, fix it with 3 sets of M8 * 45 screws & split lock washers and 8 sets of M6 * 35 screws.

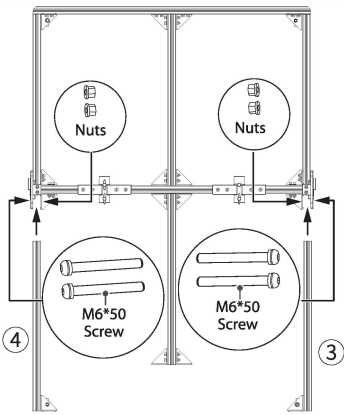


- Install the lower side of bracket: Place ③ and ④ as shown, fix them with 4 sets of M6 * 50 screws & nuts.

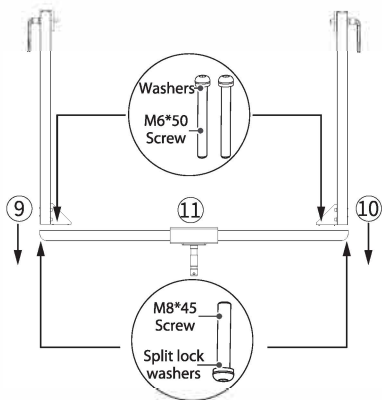


- Install the bottom of bracket: Place ⑨ ⑩ ⑪ as shown, fix them with 4 sets of M6 * 50 screws & washers and 2 sets of M8 * 45 screws & split lock washers.

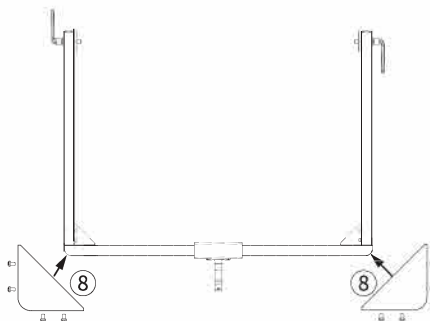


- Install the corner guards of bottom of bracket: Place ⑧ as shown, fix them with 2 sets of 4 pieces M8 * 45 screws.

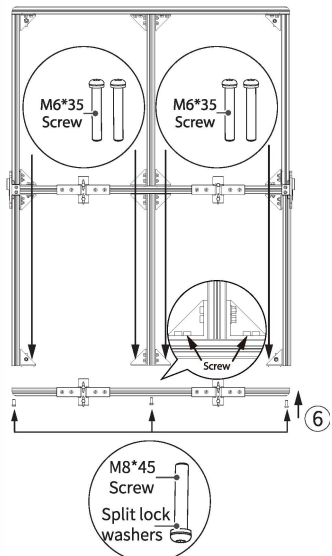

- Install the lower of bracket: Place ⑥ as shown, fix it with 3 sets of M8 * 45 screws & split lock washers and 8 sets of M6 * 35 screws.

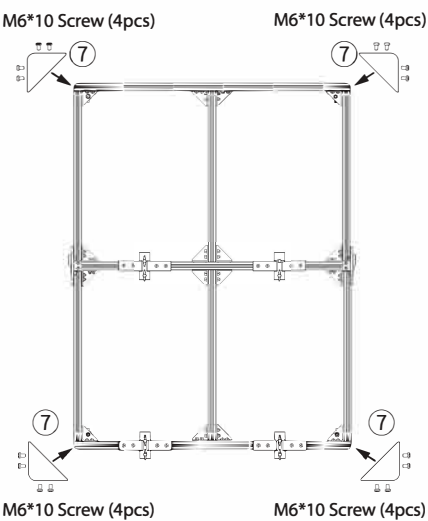

- Install the corner guards of middle bracket: Place ⑦ as shown, fix them with 4 sets of 4 pieces M8 * 45 screws.

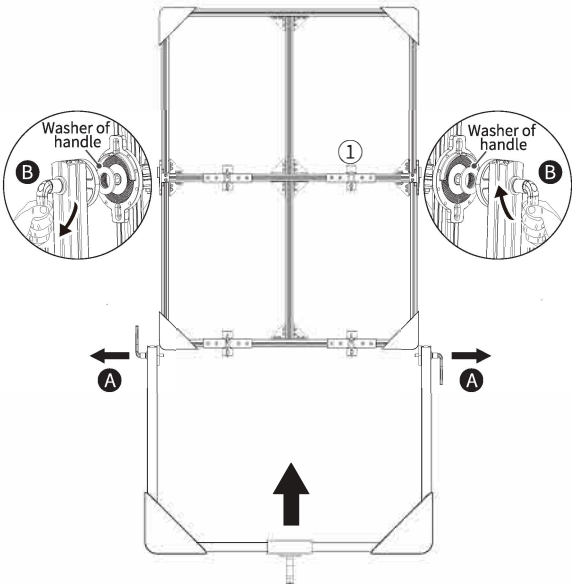

- Combine the middle and bottom of bracket: Place the components installed in step 6 and step 8 as shown, pull the bottom bracket handle outward (Figure A), push the bottom bracket from bottom to top until the yoke rosettes are flush with the rosettes on both sides of the component ①, and tighten the left and right handles to secure the bracket onto the yoke (Figure B)

-4-